



WESTWOOD METERS & TIMERS LTD

Torre Station Yard . Newton Road . Torquay . Devon . TQ2 5DD
 Telephone: Meters (01803) 297179 Timers: (01803) 299488 Facsimile: (01803) 299080
 Email: sales@electricmeters.co.uk www.electricmeters.co.uk

HOW TO CHANGE THE UNITS PER COIN RATE ON A SMITHS PREPAYMENT METER

- 1 Remove the cash box from the meter
- 2 Remove the metal retaining ring from around the coin action
- 3 To change the units per coin, remove the coin action and select the required units. For rate B these are the outer set of numbers on the brass dial (see **B** below).
- 4 Position the groove next to the appropriate unit per coin on brass dial (see **B** below) on the calibrating pin within the coin action housing of the meter (see **A** below)
- 5 Replace the metal retaining ring around the coin action
- 6 Replace the cash box


DIFFERENCE BETWEEN THE A AND B RATES

Each setting on rate B gives a multiple of four more units per coin than it would if set on rate A irrespective of the coin used, for an example see **B** below marked * ie Rate B = 4 units per coin, where Rate A = 1 unit per coin. Units per coin are currently factory set against rate B.

NB All numbers shown on the coin action are units of electricity not pounds and pence.

To change between rates A and B, insert a screwdriver into the screw located at the top left side of the coin action housing (see **A** below) and gently turn counter clockwise to change from A to B and clockwise to change from B to A. The letter on the meter above the coin register located to the left of the coin action will change accordingly.

A – Coin Action Housing

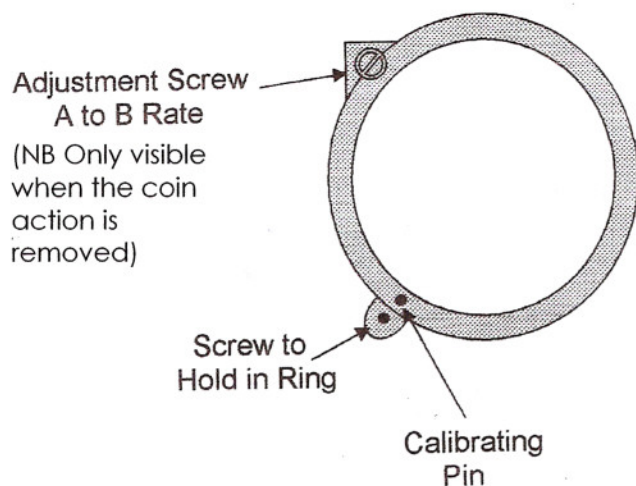

B – Coin Action Brass Dial

